

FIREPLACE

FIREPLACE IGNITION

- From the air conditioning, switch on the fireplace setting 5-10 minutes before lighting by pressing the left button until the display shows Fireplace function. (Small display panel on the wall on the toilet side of the open space)
- Close the cooker hood.
- Open both dampers on the side of the fireplace by pulling out the knobs
- Before lighting, check that the grate is clean and that the ashtray is not full. (You can empty the cold ash into a metal container next to the rubbish bin outside the cottage.)
- Close the ashtray and open the ashtray air regulator.
- Put about a tenth of the maximum amount of wood and some paper in the fireplace. Light a fire in the fireplace.
- When the firewoods are burning properly, the firewoods can be added airily stacked. Burn up to two additions of firewoods a day in the fireplace.
- When there is a proper fire in the stove, set the fireplace door air regulator fully open and close the ash door air regulator.
- **5-10 MINUTES FROM THE IGNITION CLOSE THE IGNITION SHELL by turning the damper handle straight. There is a risk of fire if the damper is kept open for longer periods during combustion!**
- Keep the fireplace door closed during use.

STOPPING THE HEATING

- When the last firewoods have burned to the charcoal stage, use the fireplace tool to pull the charcoal over the grate.
- Turn over charcoal a couple of times until charcoals are burned out (no glowing clumps).
- Close the ashtray and damper.
- If you suspect a danger of carbon monoxide, leave the damper slightly open. Remember! Carbon monoxide is an odorless, tasteless and colorless gas!

PLEASE NOTE

- The fireplace is not intended for incineration. Do not use liquid fuel for ignition.
- During heating and for a long time afterwards, the oven surfaces may be hot. The surfaces are hottest after the dampers have been closed.
- Do not leave the fireplace unattended during heating.
- Never leave children near a burning fireplace without adult supervision.
- Do not store objects made of combustible material on or near the fireplace.
- Do not empty warm or hot ash from the ashtray.
- There are more firewood in storage at the yard.