


HARVIA sauna control panel



- | | |
|--|---|
| <ul style="list-style-type: none"> 1. Heater on/off 2. Heater on with delay 3. Optional function (e.g. lighting) on/off 4. Mode change 5. Value increase 6. Value decrease | <ul style="list-style-type: none"> 7. Indicator light: Temperature 8. Indicator light: Remaining delay time 9. Indicator light: Remaining on-time 10. Indicator light: Dehumidifying interval 11. Indicator light: Keypad lock |
|--|---|

Heater on

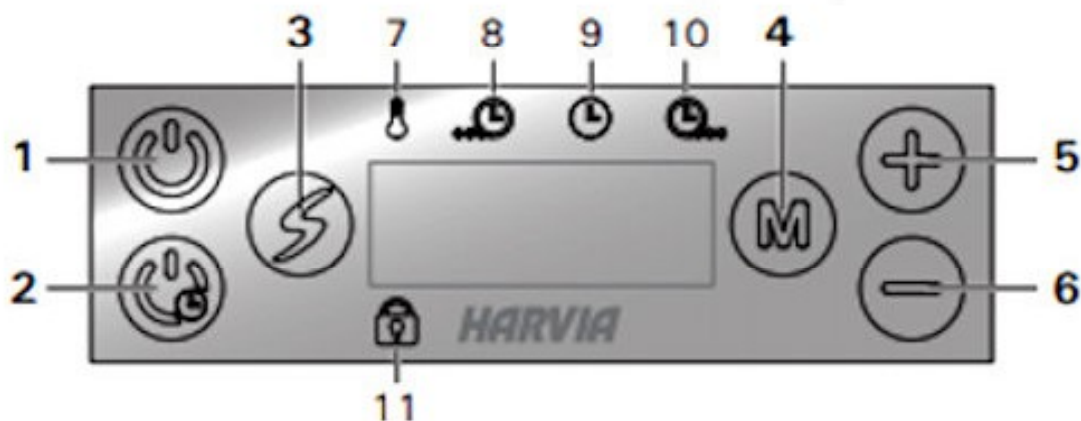

Press button 1 (long press).

80 C

The set temperature is displayed first, after which the display switches to current sauna room temperature. The heater starts heating immediately.

22 C

Settings



Press button 4.

80 C

Temperature. The adjustment range is 40–110 °C.



Press button 4.

4:00

Remaining on-time. The minimum value is 10 minutes. The maximum value can be set from additional settings (1–12 h).



Press button 4 to exit.

Heater on with delay



Press button 2 (long press).

0:10

The decrease of remaining delay time is shown until zero appears, after which the heater and/or steamer is switched on.

Settings



Press button 4.

0:10

Delay time. The adjustment range is 0:10–18:00 h.



Press button 4.

80 C

Temperature. The adjustment range is 40–110 °C.



Press button 4 to exit.

SET4

OFF

Sauna dehumidifying interval. Options: 45 minutes (ON) and OFF. The interval will begin when the heater is switched off or when the set on-time runs out. During the interval the heater is on and the sauna room temperature is set at 40 °C. When the time runs out, the heater turns off automatically. The interval can also be stopped manually at any time by pressing the button 1. Dehumidifying helps to keep your sauna in a good condition.



Press button 4.

SET5

OFF

Activation of optional function (e.g. lighting).

- ON
- OFF



Press button 4.

SET6

OFF

Activation of ventilation.

- ON
- OFF



Press button 4 to exit.

Heater off



The heater will turn off when the button 1 is pressed, the on-time runs out or an error occurs.

Keypad lock



When in standby mode, keypad lock can be engaged by pressing buttons 1 and 2 for three seconds. The lock symbol is lit.